## **CBU-CEFL**

# Ceiling Flush Mount Passive Infra Red (PIR) Occupancy Detector & Photocell

CASAMBI Input: 220-240 Vac 50Hz

PLEASE READ THESE INSTRUCTIONS BEFORE INSTALLING THE PRODUCT NOTE: CBU-CEFL is only compatible to work with CASAMBI enable equipment

This flush mounted CBU-CEFL is suitable for easy mounting through a 73/75mm diameter hole

into a ceiling void which is at least 78mm deep. Configurable for any room occupancy style, via the free to download Casambi APP on Google Play or Apple APP Store.



#### INSTALLATION

To be installed by a competent person with reference to BS 7671 or equivalent local standards. If in doubt consult a qualified electrician.

- · Plan where the CBU-CEFL is to be located (see diagram 1). Switch off supply and check for hidden cables and pipes. Make a 73/75mm diameter hole through a standard ceiling board.
- · The CBU-CEFL should be connected as shown in diagram 2:
  - L Live in. N Neutral in.
- · Ensure both springs are fitted to the moulding in the correct orientation (see diagram 3).
- · Push the CBU-CEFL into the ceiling void, making reference to diagram 4.

## **OPERATION**

To check the operation of the CBU-CEFL:

- . Turn on the supply then after 20 seconds if the sensor has recognised movement of a person within its zone of detection the integral red LED on CBU-CEFL will stay illuminated for 4 seconds before the red LED turns off.
- · Thereafter, every time movement is detected by CBU-CEFL the integral red LED will stay illuminated for 4 seconds.

The control also features adjustable time out (time lag) control and daylight threshold control which are configured by the Casambi APP.

#### **PRECAUTIONS**

- · Do not place the CBU-CEFL near heat sources, fans or in ventilated ceiling voids.
- · CBU-CEFL can be wired in parallel (sharing the same Live and Neutral).
- · Do not place close to, or positioned such that, any light source points directly into the CBU-CEFL.
- · Ensure wires and cables are securely held within the connection terminals.
- The CBU-CEFL should be protected by a 5 or 6 Ampere mcb or fuse.
- . Disconnect the CBU-CEFL from the circuit before performing insulation testing of the wiring circuit.

#### **TECHNICAL DETAILS**

INPUT	
Voltage:	220 - 240Vac
Frequency:	50Hz
Max. mains current:	0.05A
Standby current:	0.05A
RADIO TRANSCEIVER	}
Operating frequencies:	2.4 2,483 GHz
Max. output power:	+4 dBm
OPERATING CONDITI	ONS

OPERATING CONDITIONS

Note: The temperature difference between the detection target and the background must be at least 4 °C

Ambient temperature:	-20 +40 °C (lout 0.05 A)	
Max. case temperature:	+70 °C	
Storage temperature:	-25 +75 °C	
Max. relative humidity:	0 80%, non cond.	
CONNECTORS		

Terminal block Wire size:	0.5mm <sup>2</sup> - 2.5mm <sup>2</sup> solid or stranded
Wire strip length:	6-7mm
Tightening torque:	0,4 Nm/4 Kgf.cm

### MECHANICAL DATA

Dimensions:	79mm x 85mm x 85mm
Weight:	95g (unpacked)
Degree of protection:	IP20
Protection class:	Built-in Class 2
Material (casing)	Flame-retardant polycarbonate
Finish / Colour	Matt /White (RAL 9003)
Protection class:	Built-in Class 2
TOTOGUETT GIGGOT	- Cant

CONFORMITY AND STANDARDS	
EMC emission:	EN60669-2-1:2004 inc. A12:2010
EMC immunity:	EN60669-2-1:2004 inc. A12:2010
Safety:	EN60669-2-1:2004 inc. A12:2010
Environment:	Complies with WEEE and RoHS directives

#### **5 YEAR WARRANTY**

CBU-CEFL comes with a 5 year warranty from the date of manufacture and is CE marked.













